



Press and hold the **bind** button on the back with your fingers, and then turn on the remote control



- The middle indicator light keeps flashing, which means that the remote control is ready. Then you can put the remote control aside and let it flashing. Next, we take out the Drone and go to the next step



Press and hold the frequency key of the receiver with tweezers, later connect the two batteries of the Drone. The drone and remote controller can be bind automatically. After binding, the indicator light of the remote control is always on